


Body Worn Camera User Manual

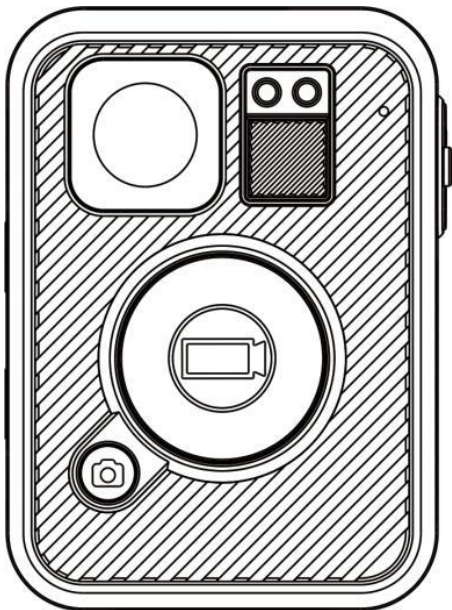

Thanks for your purchasing. This camera is specially designed for video recording and photo taking. Please read the user manual before using it.

Important information: before you start to use this device, please connect it to computer through auxiliary USB cable, then **press Fn button for six times** to get access to camera storage. Copy **BodyCam PC software** to your computer for camera setting purpose in the future. **BodyCam PC software** will be deleted if you format the camera storage. Please contact vendor if it is lost.

The device is a new generation video recorder of High Efficiency video coding (HEVC, H.265) and low power consumption. If record videos by using H.265 coding format, it is suggested to download Media Player Codec Pack (check the link below) to assist to playback H.265 videos on windows Media Player.

<https://www.mediaplayercodecpack.com/>

Body Camera Exterior Overview



Item	Description
1.LCD Screen	Showing the battery, storage, GPS,WIFI, Mute, Infrared, Video recording status; Press power button to turn LCD on/off
2.Charging dock connector	Connect charging dock for charging or connecting PC.
3.Camera Lens	Full HD camera
4.Status Indicator LED	Green: standby mode(power on but not recording) Solid Red: pre-record mode Flashing Red: video recording Flash once(red): taking photo
5.Charging Indicator LED	Blue: charging status White: charge done (fully charged)
6.Infrared Lights	Providing infrared light compensation to help camera record good quality video in low light conditions.
7.Light Sensor	Detect changes of light and turn on/off IR for low light recording automatically.
8.Record Button	a) Press to start video recording b) Hold 3 seconds to stop video recording c) While camera is powered off, hold 3 seconds, camera will turn on and start recording.

<p>9.Snapshot Button</p>	<p>a) Press to take a photo in standby mode. b) Press to take a single snapshot image while in video recording mode. c) Hold 3 seconds to enable covert mode, both voice, LED & LCD indication will be disabled, camera will only vibrate: Start recording, vibrate once, stop recording, vibrate twice.</p>
<p>10.USB Port & Reset button</p>	<p>For charging or connection to PC PS: connects to external camera (optional). Reset button is inside small hole near USB port and it is used to reset the device when it works abnormally.</p>
<p>11.Fn Button</p>	<p>a) Press to turn on/off infrared lights when infrared lights are in manual mode. b) When camera is in standby mode, hold 3 seconds to turn on/off WIFI. c)Double click (press 2 times in 1 second) Fn button to enable/disable video mute. When video mute is turned on, recorded video will have no audio, only video.</p>
<p>12.Power Button</p>	<p>Hold 3 seconds to turn on; Hold 3 seconds to turn off.</p>

How to Operate

Power on/off and Standby mode

Hold the power button 3 seconds to turn the camera on, camera will be in standby mode. Hold 3 seconds again to turn the camera off.

Video Recording

When camera is in standby mode, press REC button to start video recording, recording initiates with audio prompt (**Recording start**), Status Indicator LED (Red recording indicator flashing) and camera vibrate once.

Hold 3 seconds to stop recording, camera vibrate twice and status indicator LED turns to solid green.

Note: When camera is powered off, hold Record button 3 seconds to power camera on and start video recording.

Snapshot

Either when camera is in standby mode or recording video, press snapshot button to take a photo, status indicator LED will flash once(red).

Hold snapshot button 3 seconds to enable covert mode, both LED, LCD & voice indication will be disabled. Camera recording status will be indicated by vibration: start recording vibrate once, stop recording vibrate twice.

WIFI

When camera is in standby mode, hold Fn button 3 seconds to turn on/off WIFI.

Note: When WiFi is on, external camera connection is disabled.

GPS

Set GPS on/off via **Camera Manager.exe** (from **BodyCam PC software**).

IR infrared night vision

Press Fn button once to turn on IR, press again to turn IR off.

Covert Mode (Stealth mode)

Hold photo button 3 seconds to enable/disable covert mode.

When covert mode is on, camera LED, LCD & audio alerts will all be disabled. Camera will vibrate only: vibrate once-start video recording; vibrate twice-stop video recording.

Video Mute

Press Fn button twice in one second (double click) to enable Video Mute function, when Mute is on, the recorded video won't have audio. When mute is enabled, camera will beep once, when mute is disabled, camera will beep twice.

LCD Screen

After camera is powered on, LCD will turn on, and LCD will turn off automatically after 1 minute. Press power button to turn on/off LCD.

When camera goes to covert mode, LCD will go off, once covert mode is disabled, LCD will turn on again.

LCD screen overview:





Standby mode
(power on but not recording)






Recording mode
(video recording)




Pre-Recording mode
(Pre-recording is set on)


IR icon : When camera IR Infrared light has been turned on, IR icon will show up .


Mute icon : When camera mute function has been turned on, Mute icon will show up.


GPS icon : When GPS was set off, the GPS icon  shows up.


When GPS has been set on, GPS icon  will show up, flashing. After GPS signal being received, GPS icon will go solid.


WIFI icon : When WIFI is off, WIFI icon is .


When WIFI has been turned on, WIFI icon will turn blue .

Storage icon : When storage is full, it will show 4 blocks, then one block less once storage has been used.

Battery icon : When battery is full, it will show 4 blocks, then one block less once battery has been used.

Resolution icon : When resolution has been set, Resolution icon will show accordingly, for example, 1440P, 1080P, 720P.

Video recording icon : When video recording starts, the red dot will start flashing. When camera is in standby mode, the red dot will be solid red.

Recording time  03:10:13 : The time format HH:MM:SS, indicates the video recorded time.

LED indication

Charging indication LED:

Blue: charging status

White: camera is fully charged

Status Indicator LED:

Solid Green: camera is in standby mode

Solid Red: camera is in standby mode, while pre-record is set on

Flashing Red: camera is recording video

Flash red once: camera is taking photo

Charging

Use the USB cable supplied in the box to charge the camera via the USB port on the side, or the USB port on the charging dock where camera is docked.

Note: upon receiving your body camera, it is recommended to get device fully charged before usage; Recharge the camera before long period of not being used.

Reset

RESET BUTTON is inside the USB port

Press RESET BUTTON when camera freezes up or works abnormally.

Note:

When camera battery level goes to 5%, camera will prompt voice alarm: LOW BATTERY, LOW BATTERY

When camera memory level descend to 200MB, camera will prompt voice alarm: CARD FULL, CARD FULL

WiFi

AP mode - used for single device real time video review and controlling.

Android phone: Scan below QR code

Apple iphone : Search "Eeyescam pro" in App Store



The advertisement features two smartphones on the left. The foreground phone is an Android device with the 'Eeyescam pro' app icon highlighted by a green circle. The background phone is an iPhone with the same app icon highlighted. To the right, the text 'Eeyescam pro' is displayed in white. Below it, a green button contains the text 'Get the WIFI APP (AP mode)' and a download icon. Further down, instructions are provided: 'Android phone: Scan below QR code' and 'Apple iphone: Search "Eeyescam pro" in App Store'. A QR code is positioned below the Android instruction, and the Android logo is next to a button labeled 'Android'. To the right of the QR code is the Eeyescam Pro app icon.


Hold Fn button for 3 seconds to turn on "WiFi". You will see blue WiFi icon on top row of screen.



Go to phone/tablet WiFi setting. Find out your body camera's WiFi SSID (amba_boss-****) and select, then input WiFi password (1234567890 as default) and connect.



Open Eyescam Pro and tap “connecting device” to enter camera interface.

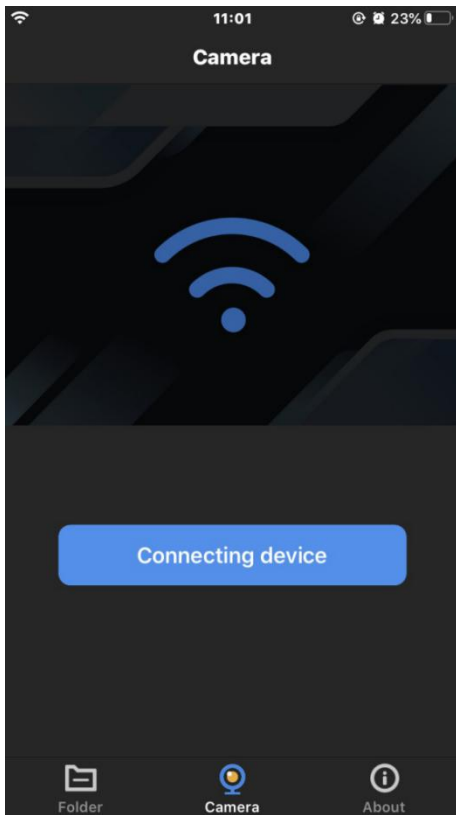


Tap resolution window to change video resolution.

Tap setting icon to enter simple setting menu.


Tap RED button to start/stop video recording.

Tap PHOTO button to make a snapshot.

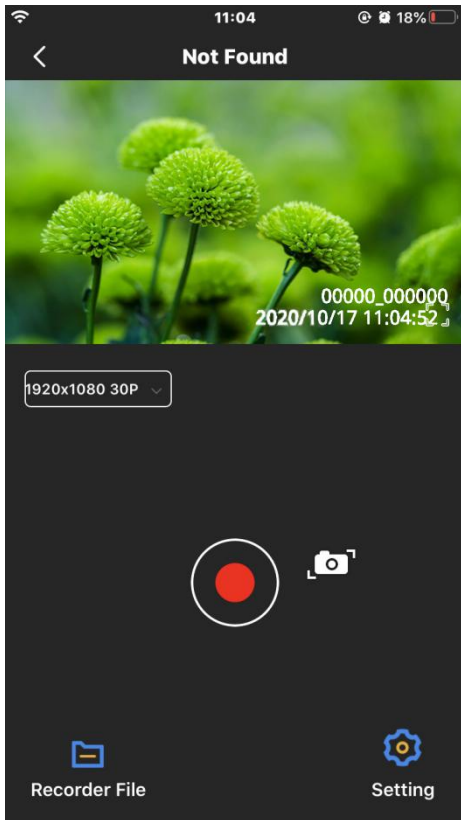





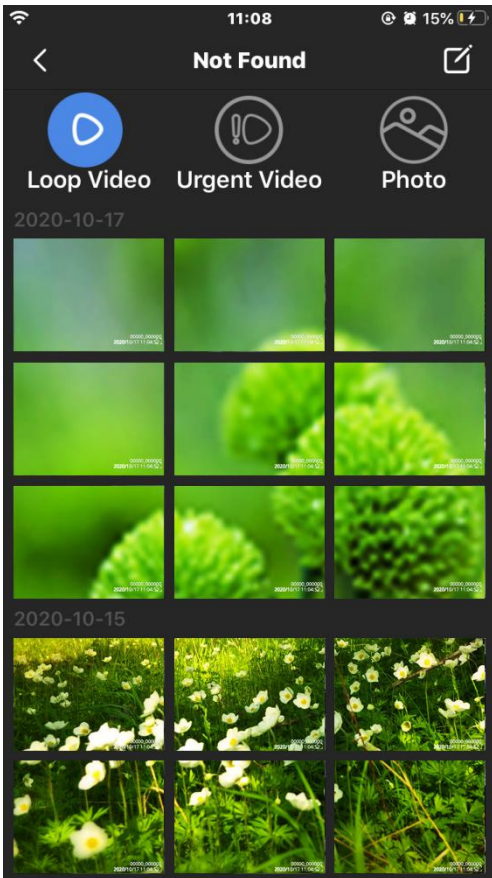








Tap “Recorder File” to view the video and photo files.



Camera setting through CAM MANAGER

Camera setting can be changed through **Camera Manager** (from **BodyCam PC software**). Before using this camera, please connect it to computer through auxiliary USB cable, then **press Fn button for six time** to get access camera storage on PC. You can find BodyCam PC Software in root folder. Please copy it to your PC for further use.

 Camera Manager 4.1	2021/3/30 18:17	1,700 KB
 Camera Manager Operation Guide	2021/3/31 18:06	221 KB
 h22_4g_pc.dll	2020/7/29 10:23	14 KB
 h22_4g_pc.h	2020/9/24 15:37	9 KB
 h22_4g_pc	2020/7/29 10:34	7 KB
 Language	2021/3/30 18:30	1 KB
 libusb0.dll	2016/10/18 9:26	59 KB
 mfc140u.dll	2016/2/15 16:43	4,340 KB
 mfc140ud.dll	2016/7/21 23:05	8,429 KB
 ucrtbased.dll	2016/8/14 5:32	1,609 KB
 vcruntime140.dll	2017/2/2 15:49	82 KB

1, Open **Camera Manager** and enter password, connect and login. (Default password is 000000)

Camera Manager 4.1 ×

Body Worn Camera

User Type :

Password :

Language :

2, Click “Get” to show up camera original settings. Choose target setting and click “Set”, then setting is changed.

The screenshot shows the 'Camera Manager 4.1' interface with the following sections:

- ID Information:** Device ID: 00000, Officer ID: 000000. Buttons: Get, Set.
- Password:** Old Password: [], New Password: []. Buttons: Get, Modify.
- Camera:** TF: 28.8GB/28.8GB, FW Version: HUV_x_v1.10_211029. Buttons: Set Default, Set Time, Enter U Disk.
- Network:** WiFi Information (SSID: H22_WIFI_AP, Password: 12345678), 4G Information (APN Addr, APN User, 4G PIN, Password).
- Server Information:** IP: [], Port: []. Buttons: Get, Set.
- Camera Config:** Resolution: 1920x1080 30, Quality: Normal, Coding Format: H.264, Split Time: 15 Mins, Loop Record: OFF, Pre-Record: OFF, Live Stream: ON, Resolution: 960x540 30P. Infrared: Manual, Time Zone: -3, Volume: 12, GPS: OFF, Rec Warning: ON, G-Sensor: OFF, Coding Format: H.264. 4G: [], WiFi: OFF, Post Record: OFF, Auto Record: OFF, Motion Detect: OFF, Photo Size: 3M, EIS: OFF, AES Encryption: []. Buttons: Get, Set.

3, Click “Enter U Disk” (upper right corner) to make camera to be recognized by PC as a folder. You can check all files from the camera folder.

The close-up screenshot shows the 'Camera' section with the following details:

- TF : 0.0GB/29.8GB
- FW Version: HUV_xw_v1.06_201015
- Buttons: Set Default, Set Time, Enter U Disk.

A red arrow points to the 'Enter U Disk' button.

IMPORTANT INFORMATION

The clips and attachment studs rotate 360 degrees -

The crocodile clip, epaulette clip, chest harness and shoulder harness attachment studs ALL turn 360 degrees. Slot the clip into the back of the camera then turn the clip vertically. Or you can slot the clips into the back of the body camera first, then attach the body camera to the chest or shoulder harness, then turn the body camera vertically.

Reset device-

To reset the device, use a small needle to jab the reset button. The reset button is located next to the USB port.

Delete files -

You can only delete the recorded files from a computer. This is to stop people from getting rid of the evidence straight from the device itself. To delete the files from your computer, right click, and then delete them.

Product warranty -

We offer a 12-month warranty on the body camera. This warranty covers faults that were caused by the manufacturer. If the fault was caused by the customer, then the warranty will be void.

USB cable -

Please only use the USB cable provided in the product box. Using other USB cables might cause damage to the body camera.

Attention -

- ① Charge camera fully after camera is left without working for long time.
- ② Keep camera bottom away from water to avoid short circuit or oxidation.
- ③ Don't disassemble camera without authorized instruction.
- ④ When **WiFi is on** or **low battery**, external camera connection is disabled.